



Car Signal Components

Fire Service/FEO Key Switch Parts

*FEO Key Switches include 2 FEO-K1 keys

■ Please see Fire Service Key Function chart on pg 251




FEO-K1



FEO-UNV-003



FEO-TR-001H

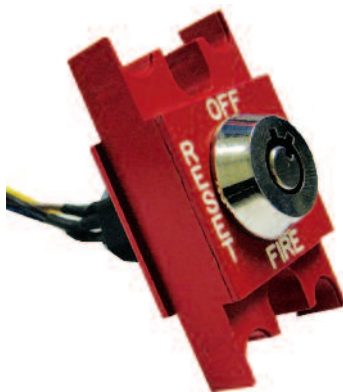

FEO-IMS-001HR



FEO-INS-002

Universal

| S.E.E.S. # | Description |
|--------------|---|
| FEO-K1 | Fire Service Key, Universal ACE key for PH I & PH II |
| FEO-UNV-001 | FEO Fire Service, Universal PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-UNV-001R | FEO Fire Service, Universal PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-UNV-002 | FEO Fire Service, Universal PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-UNV-003 | FEO Fire Service, Universal 2 Pos, Rmv 2 (Off-On) |

Traditional

| S.E.E.S. # | Description |
|--------------|--|
| FEO-TR-001H | FEO Fire Service, Traditional, H PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-TR-001V | FEO Fire Service, Traditional, V PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-TR-001HR | FEO Fire Service, Traditional, H PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-TR-001VR | FEO Fire Service, Traditional, V PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-TR-002H | FEO Fire Service, Traditional, H PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-TR-002V | FEO Fire Service, Traditional, V PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-TR-003H | FEO Fire Service, Traditional, H 2Pos, Rmv2 (Off-On) |
| FEO-TR-003V | FEO Fire Service, Traditional, V 2Pos, Rmv2 (Off-On) |

Impulse

| S.E.E.S. # | Description |
|---------------|---|
| FEO-IMS-001H | FEO Fire Service, Impulse, Sq., H PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-IMS-001V | FEO Fire Service, Impulse, Sq., V PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-IMS-001HR | FEO Fire Service, Impulse, Sq., H PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-IMS-001VR | FEO Fire Service, Impulse, Sq., V PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-IMS-002H | FEO Fire Service, Impulse, Sq., H PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-IMS-002V | FEO Fire Service, Impulse, Sq., V PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-IMS-003H | FEO Fire Service, Impulse, Sq., H 2Pos, Rmv2 (Off-On) |
| FEO-IMS-003V | FEO Fire Service, Impulse, Sq., V 2Pos, Rmv2 (Off-On) |
| FEO-IMR-001H | FEO Fire Service, Impulse, Rn, H PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-IMR-001V | FEO Fire Service, Impulse, Rn, V PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-IMR-001HR | FEO Fire Service, Impulse, Rn, H PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-IMR-001VR | FEO Fire Service, Impulse, Rn, V PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-IMR-002H | FEO Fire Service, Impulse, Rn, H PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-IMR-002V | FEO Fire Service, Impulse, Rn, V PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-IMR-003H | FEO Fire Service, Impulse, Rn, H 2Pos, Rmv2 (Off-On) |
| FEO-IMR-003V | FEO Fire Service, Impulse, Rn, V 2Pos, Rmv2 (Off-On) |

Innovation

| S.E.E.S. # | Description |
|--------------|---|
| FEO-INS-001 | FEO Fire Service, Innovation, Sq, PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-INS-001R | FEO Fire Service, Innovation, Sq, PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-INS-002 | FEO Fire Service, Innovation, Sq, PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-INS-003 | FEO Fire Service, Innovation, Sq, 2Pos, Rmv 2 (Off-On) |
| FEO-INR-001 | FEO Fire Service, Innovation, Rn, PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-INR-001R | FEO Fire Service, Innovation, Rn, PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-INR-002 | FEO Fire Service, Innovation, Rn, PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-INR-003 | FEO Fire Service, Innovation, Rn, 2 Pos, Rmv2 (Off-On) |

Car Signal Components

Fire Service/FEO Keys Switch Parts

*FEO Key Switches include 2 FEO-K1 keys

■ Please see Fire Service Key Function chart on pg 251

Westinghouse

| S.E.E.S. # | Description |
|-------------|--|
| FEO-WB-001 | FEO Fire Service, Westinghouse PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-WB-001R | FEO Fire Service, Westinghouse PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-WB-002 | FEO Fire Service, Westinghouse PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-WB-003 | FEO Fire Service, Westinghouse, 2Pos, Rmv2 (Off-On) |



FEO-WB-001

Dover Aurora

| S.E.E.S. # | Description |
|-------------|---|
| FEO-AU-001 | FEO Fire Service, Aurora, PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-AU-001R | FEO Fire Service, Aurora, PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-AU-002 | FEO Fire Service, Aurora, PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-AU-003 | FEO Fire Service, Aurora, 2Pos, Rmv2 (Off-On) |



FEO-AU-001R

US

| S.E.E.S. # | Description |
|-------------|---|
| FEO-US-001 | FEO Fire Service, US, PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-US-001R | FEO Fire Service, US, PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-US-002 | FEO Fire Service, US, PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-US-003 | FEO Fire Service, US, 2Pos, Rmv2 (Off-On) |



FEO-US-001

GAL

| S.E.E.S. # | Description |
|---------------|---|
| FEO-GAL-001H | FEO Fire Service, GAL, Rnd, H PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-GAL-001V | FEO Fire Service, GAL, Rnd, V PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-GAL-001HR | FEO Fire Service, GAL, Rnd, H PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-GAL-001VR | FEO Fire Service, GAL, Rnd, V PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-GAL-002H | FEO Fire Service, GAL, Rnd, H PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-GAL-002V | FEO Fire Service, GAL, Rnd, V PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-GAL-003H | FEO Fire Service, GAL, Rnd, H 2Pos, Rmv2 (Off-On) |
| FEO-GAL-003V | FEO Fire Service, GAL, Rnd, V 2Pos, Rmv2 (Off-On) |



FEO-GAL-002V

Adams

| S.E.E.S. # | Description |
|--------------|---|
| FEO-AD-001 | FEO Fire Service, Adams, Rn PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-AD-001R | FEO Fire Service, Adams, Rn PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-AD-002 | FEO Fire Service, Adams, Rn PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-AD-003 | FEO Fire Service, Adams, Rn 2Pos, Rmv2 (Off-On) |
| FEO-ADS-001 | FEO Fire Service, Adams, Sq PH 1, 3Pos, Rmv2 (Byp-Off-On) |
| FEO-ADS-001R | FEO Fire Service, Adams, Sq PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-ADS-002 | FEO Fire Service, Adams, Sq PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-ADS-003 | FEO Fire Service, Adams, Sq 2 Pos, Rmv2, (Off-On) |



FEO-AD-002

Car Signal Components



Fire Service/FEO Key Switch Parts

*FEO Key Switches include 2 FEO-K1 keys

■ Please see Fire Service Key Function chart on pg 251



FEO-PN-002

Payne

| S.E.E.S. # | Description |
|-------------|--|
| FEO-PN-001 | FEO Fire Service, Payne, PH 1, 3Pos, Rmv2 (By-Off-On) |
| FEO-PN-001R | FEO Fire Service, Payne, PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-PN-002 | FEO Fire Service, Payne, PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-PN-003 | FEO Fire Service, Payne, 2Pos, Rmv2 (Off-On) |



FEO-KON-001

Kone

| S.E.E.S. # | Description |
|-------------|---|
| FEO-KN-001 | FEO Fire Service, Kone, PH 1, 3Pos, Rmv2 (By-Off-On) |
| FEO-KN-001R | FEO Fire Service, Kone, PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-KN-002 | FEO Fire Service, Kone, PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-KN-003 | FEO Fire Service, Kone, 2Pos, Rmv2 (Off-On) |



FEO-SCH-002

Schindler

| S.E.E.S. # | Description |
|--------------|---|
| FEO-SCH-001 | FEO Fire Service, Schindler CT, PH 1, 3Pos, Rmv2 (By-Off-On) |
| FEO-SCH-001R | FEO Fire Service, Schindler CT, PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-SCH-002 | FEO Fire Service, Schindler CT, PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-SCH-003 | FEO Fire Service, Schindler CT, 2 Pos, Rmv2 (Off-On) |
| FEO-SCK-001 | FEO Fire Service, Schindler MT, PH 1, 3Pos, Rmv2 (By-Off-On) |
| FEO-SCK-001R | FEO Fire Service, Schindler MT, PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-SCK-002 | FEO Fire Service, Schindler MT, PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-SCK-003 | FEO Fire Service, Schindler MT, 2Pos, Rmv2 (Off-On) |



FEO-OB-001

Otis

| S.E.E.S. # | Description |
|-------------|--|
| FEO-OB-001 | FEO Fire Service, Otis M1, PH 1, 3Pos, Rmv2 (By-Off-On) |
| FEO-OB-001R | FEO Fire Service, Otis M1, PH 1, 3Pos, Rmv2 (Reset-Off-On) |
| FEO-OB-002 | FEO Fire Service, Otis M1, PH 2, 3Pos, Rmv2 (Off-Hold-On) |
| FEO-OB-003 | FEO Fire Service, Otis M1, 2Pos, Rmv2 (Off-On) |